



Umodan® RadonProtect System

One System for various Applications

www.radon-protect.com

1. Radon-Prevention in new buildings – under base plate

Before implementing the base plate install the RadonProtect Foil in sandwich construction with the protective membrane Wikaflor on smooth well prepared ground. Handle radon-tight according to the manufacturer's instruction.

2. Radon-Remediation in existing buildings – under floor screed

Place RadonProtect Foil in sandwich construction with the protective membrane Wikaflor on the floor. According to the manufacturer's instruction handle radon-tight and glue the foil to components or masonry. Install the floor screed.

3. Radon-Remediation in existing buildings – with special fleece lamination



If it is necessary to glue flooring (e.g. carpet, tiles, parquet) directly onto the RadonProtect Foil, please ask for our special foil type RadonProtect FLEECE, which has a special fleece lamination on both sides. According to the manufacturer's instruction overlap the RadonProtect FLEECE foil sheets, handle radon-tight. Glue the foil to components or masonry. Install the flooring.

All procedures must be in accordance to manufacturers instruction.

All actions must be cleared with the responsible architects and professional planners.



RadonProtect PREMIUM foil, the underside is laminated with fleece, with self-adhesive strips

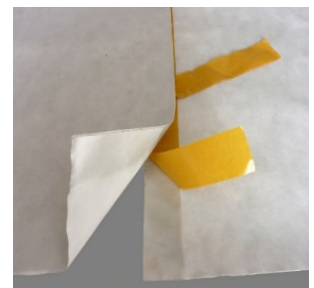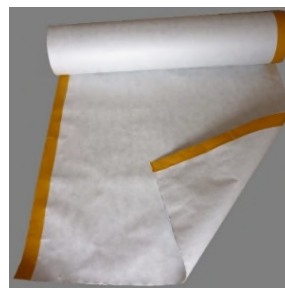

RadonProtect VLIES foil, laminated on both sides with fleece, with self-adhesive strips

Manufacturer

WIK A Isolier- und Dämmtechnik GmbH
Sebastianstraße 2 DE - 85049 Ingolstadt
Tel (+49) 0841 981.75280 Fax 0841 981.752.84
www.wikagmbh.de info@wikagmbh.de

Distribution • Measuring • Concept Planning

Dipl.Biol. Pamela Jentner OrangePep GmbH
Unterer Graben 65 DE - 85354 Freising
Tel (+49) 08168. 99 83 99 info@orangepep.de
www.orangepep.de www.radon-protect.com